
C3-3DC INSTALL GUIDE

DIMENSIONAL RENDERINGS

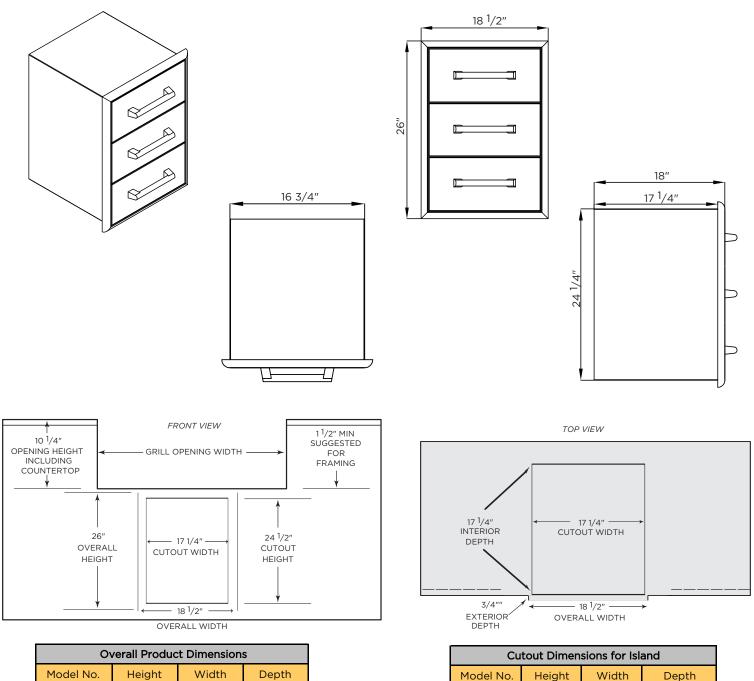

✓ 2 anchor points are located on each side of the doors interior frame (top, bottom, left and right)

20 1/4"

 \checkmark Due to wide variance of possible building materials, anchors are not included

18 1/2"

C3-3DC

26"

✓ When inserting your anchors be sure to use a framing square to ensure the door is not pulled out of square

✓ Additional framing and/or support underneath the rear (hanging portion) of the cabinet is recommended

✓ These specs are accurate but we always suggest having the product physically on site to ensure full understanding of how this product will coordinate with your build

C3-3DC

24 1/4"

17 1/4"

16 3/4"

